



Inflate-a-fun

55 Oak Drive, Toccoa GA 30577 706-886-9726 706-244-4124.
www.inflateafun.com inflateafun@windstream.net

Cotton Candy Machine Instructions

1. Find a suitable level location and plug machine in to a dedicated circuit.
2. Add sugar (Floss) into the head, do not overfill. **(Never add sugar while motor is running and head is spinning)**
3. There are two switches on the unit, The Heat Switch (left) turns on the heating element, and the Main Switch (right) turns the motor ON and OFF. Make sure you have a flossing cone in hand, switch HEAT to ON position first then switch MAIN to ON.
4. When you can visibly see the cotton candy “web” begin to form, collect the cotton candy on the cone by holding the cone vertically. Rotate the cone with your fingers while you circle the bowl. Once cotton candy has collected on the cone then hold the cone in a horizontal position over the extractor head still rotating the cone with your fingers. Continue turning the cone with your fingers while the cone is in the horizontal position and move from side to side making sure you are collecting all the cotton candy.
5. Turn the HEAT and MOTOR switch OFF when all the sugar has been dispensed. Once the extractor head has come to a complete stop, you can add more sugar and begin again. The cotton candy should flow more quickly as the unit warms up.
6. Only use the sugar provided with the unit, any other products will damage the equipment.

** TIP: If floss does not adhere easily to the cone, you can spray the cone lightly with water.

Cleaning Instructions

1. Make sure unit is unplugged and has had time to cool down before cleaning.
2. First warm up the flossing head for 30 seconds with the heat switch then turn it off. Turn on the motor only to start flossing head. Pour 2 tablespoons of warm water into the top of the spinning head to blow all the sugar out. (Do Not Use Heat While Cleaning) Let the extractor head spin until all the water has spun out. Once there is no more water spinning out of the head, turn the motor off. Repeat procedure if necessary to thoroughly clean head.
3. Remove bowl by lightly pushing down and rotating off mount screws and clean with warm soapy water and rinse completely
4. Use a slightly damp, non abrasive sponge or towel to wipe clean the outside of the unit and dry with a towel.

Failure to properly clean unit will result in a \$50.00 cleaning fee added to your bill.